




PRODUCT SPECIFICATIONS

INFORMATION FOR BUILT IN AND STAND ALONE GRILLS, DOORS AND DRAWER

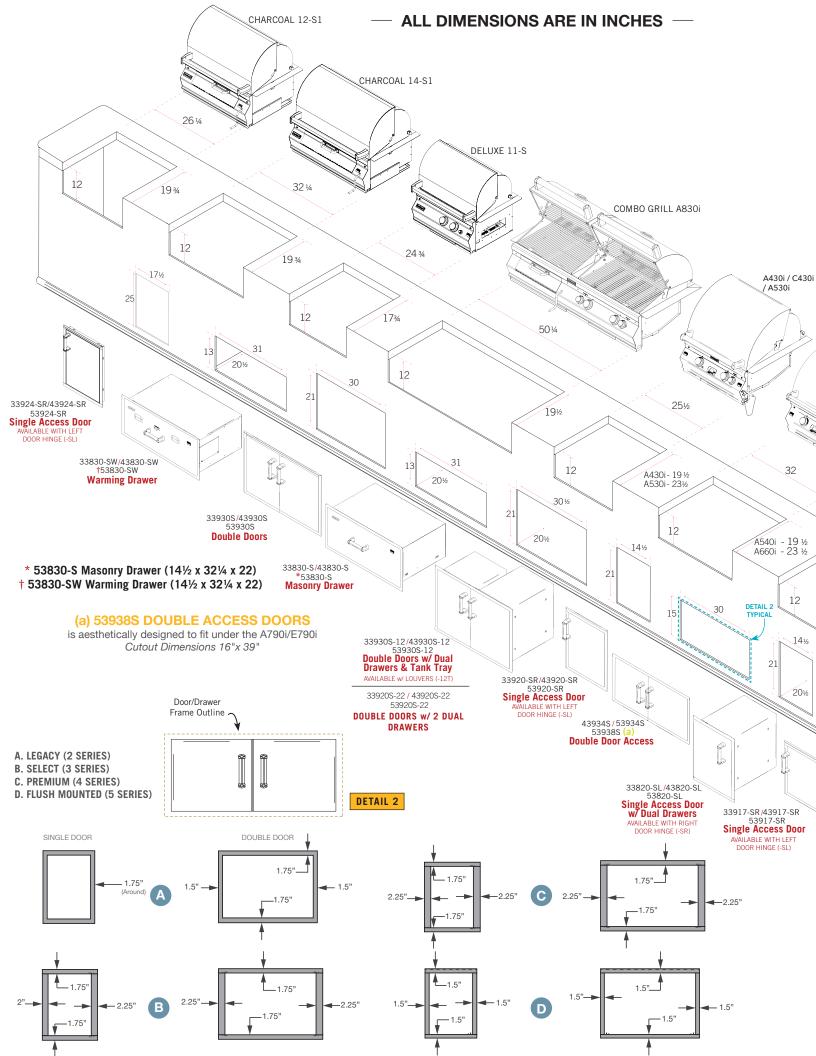

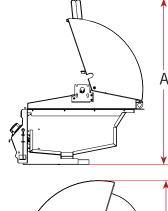

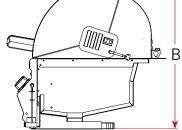

A540i / C540i / A660i

DESCRIPTION	HOOD OPEN	HOOD CLOSED
	А	В
Echelon E1060i	35 ⁵ /8"	27"
Echelon E790i	35 ⁵ /8"	27"
Echelon E660i	35 5/ ₈ "	27"
Aurora A830i	35 ⁵ /8"	27"
Aurora 790i	35 ⁵ /8"	27"
Aurora A660i	35 ⁵ /8"	27"
Aurora A540i	32 1/ ₄ "	25 1/ ₄ "
Aurora A530i	35 ⁵ /8"	27"
Aurora A430i	32 ¹ /4"	25 1/ ₄ "
Deluxe 11-S	29 ³ /4"	25 1/ ₈ "
32" Gourmet Charcoal 14-S1	31 ³ /4"	26 ¹ /2"

26" Gourmet Charcoal 12-S1

31 ³/₄"

26¹/2"

Carefully consider grill size & accessories needed

- Combustible construction requires insulating liner
- Select Natural or Propane (LP gas)
- Determine total gas consumption for supply line size
- Access required to gas connections and shut off valve
- Plan location of propane tank away from grill and appliances

OUTDOOR KITCHEN CONSIDERATIONS


- Always refer to the installation and operating instructions of your Fire Magic[®] grill and/or accessories for installation guidelines & safety warnings before starting your project
- · Always check all gas connections for leaks
- Provide ventilation in island for gas vapors. Allow at least four ventilation openings (two at floor level and two 16" above floor 10 in² each) at opposing ends/sides

LOCATION

- · Identify outdoor area where grill will be installed
- Determine the utilities needed (gas, water, electricity, drainage etc.)
- Consider element exposure (sun, wind direction*, weather etc.)

MATERIALS

- Foundation- concrete
- Base- brick, stone, stucco, concrete
- Counter top- tile, granite, marble, concrete

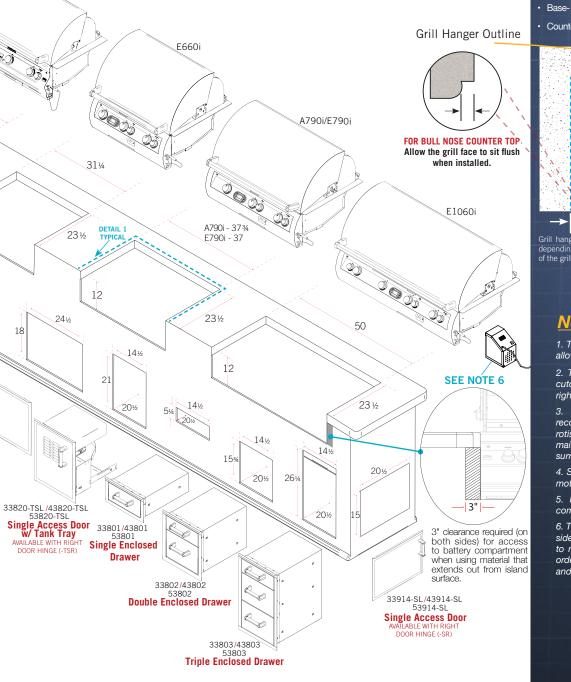

1 1/4'

Notes

1. There is a hanger on three sides of each grill. You must allow clearance for the hanger (SEE DETAIL 1).

2. The control panel (face) of the grill is wider than the cutout width. This conceals the cutout space on the left & right hand sides.


3. Clearance of 10" on each side of the oven is recommended for unrestricted operation of lid and rotisserie and at least 3" at the rear flange for ease of maintenance and proper operation. (18" from combustible surroundings on each side and rear is required)

4. See specific model cutout plan for units equipped with motorized hood.

5. Insulating liners must be used & are available for combustible surrounds (See page 6).

6. The rotisserie motor on all models is located on the right side of the grill. Optional Reverse Brackets are available to mount rotisserie motor on opposite side. ONLY units ordered with back burner option come with rotisserie kit and brackets.

★ (-S) signifies STAINLESS STEEL w/o (-S) signifies BLACK POWDER COATE

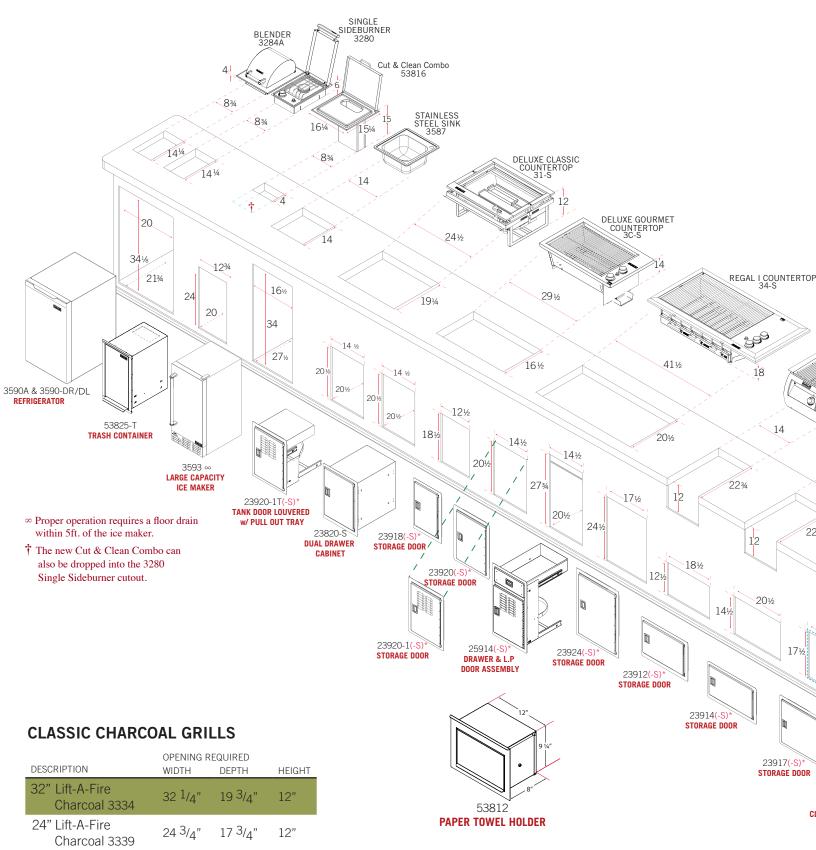

ACCESSORIES CUT-OUT DIMENSIONS

31" Firemaster 3324

24" Firemaster 3329

FIREMAGIC

31 1/4'


24 1/4'

21 1/4"

19 ¹/₄"


12"

12"

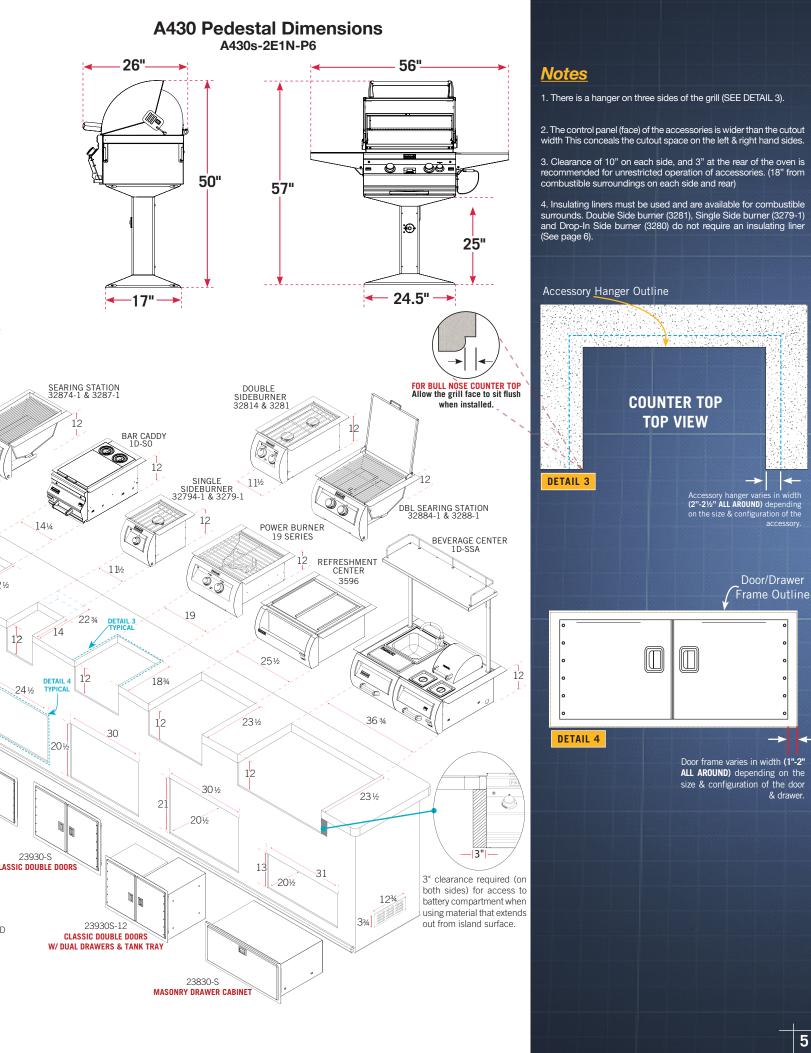

INSULATING LINER MUST BE USED WHEN INSTALLING IN A COMBUSTIBLE ISLAND

Not used on Double Sideburner (3281), Single Sideburner (3279-1) or Drop-In Sideburner (3280)

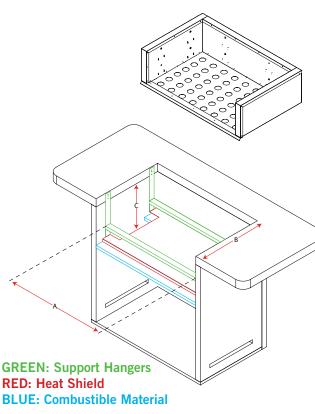

GRILL CUT-OUT DIMENSIONS w/ INSULATING LINER

	OPENING REQUIRED					
MODEL	WIDTH	DEPTH	HEIGHT			
	Α	В	С			
Echelon E1060i	55"	26"	12"			
Echelon E790i	42 ¹ /8"	26"	12"			
Echelon E660i	36 ³ /8"	26"	12"			
Aurora A790i	42 ¹ /8"	26"	12"			
Aurora A660i	36 ³ /8"	26"	12"			
Aurora A540i	36 3/ ₄ "	22 1/ ₈ "	12"			
Aurora A530i	30 ¹ /8"	26"	12"			
Aurora A430i	30 1/ ₈ "	22 1/ ₈ "	12"			

Maintain proper clearance to combustible materials.

Notes:

1. A nominal 1/16" gap around the back and sides of the liner is recommended for ease of installation.

2. The counter top material may be placed up to the insulating liner on the back and sides.


3. A minimum of 100 sq. in. in air ventilation is required at cabinet face.

4. Cabinet face may be made of combustible material up to the front flange of the insulating liner.

To install and operate the Fire Magic[®] outdoor gas appliance, please refer to the Installation and Operating instructions and safety precautions shipped with the appliance.


ACCESSORY & LEGACY CUT-OUT DIMENSIONS w/ INSULATING LINER


	OPENING REQUIRED					
MODEL	WIDTH	DEPTH	HEIGHT			
	Α	В	С			
Deluxe	28	19 ³ /8"	12 ¹ /4"			
Power Burner	22 ⁵ /8"	20 3/ ₄ "	12"			
Searing Station	18 3/8"	24 ³ /4"	11 5/8"			

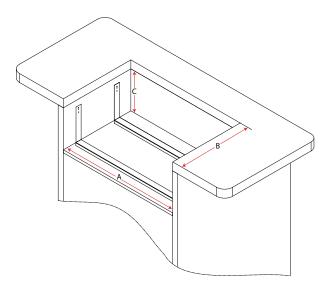


The information provided is for reference only. Detailed instructions are supplied with the insulation liner, unique to the model selected. Read those instructions carefully and completely before starting installation of the liner.

ECHELON STAND ALONE

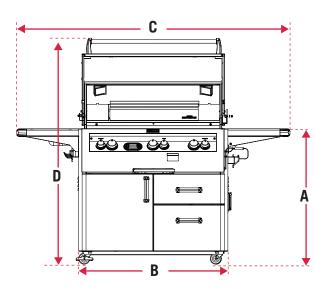


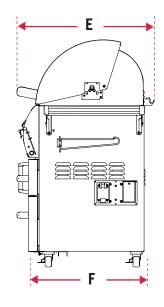


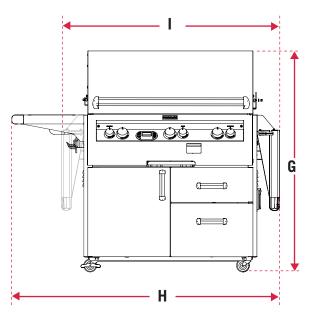


Model #	Series	Top of Face (A)	Cart Base (B)	Shelves Up (C)	Oven Open (D)	Max Outer (E)	Cart Base (F)	Oven Closed (G)	1-Up/1-Down (H)	Shelves Down (I)
E1060	62	37"	53"	86 ¹ /4"	60 ⁵ /8"	29 3 _{/4"}	26"	52"	74 3/ _{4"}	n/a
E1060	51/71	37"	77 3 _{/4"}	111"	60 ⁵ /8"	29 3/ _{4"}	26"	52"	99 1/ _{2"}	88"
E790	62	37"	40"	73 1 _{/4"}	60 ⁵ /8"	29 3 _{/4"}	26"	52"	61 ³ / _{4"}	n/a
E790	71	37"	58 ³ /4"	92"	60 ⁵ /8"	29 ³ /4"	26"	52"	80 ¹ /2"	69"
E660	62	37"	34 1/ _{4"}	67 ¹ /2"	60 ⁵ /8"	29 3 _{/4"}	26"	52"	56"	n/a
E660	71	37"	53"	86 ¹ /4"	60 ⁵ /8"	29 3/ _{4"}	26"	52"	74 ³ /4"	63 ¹ /4"

AURORA STAND ALONE

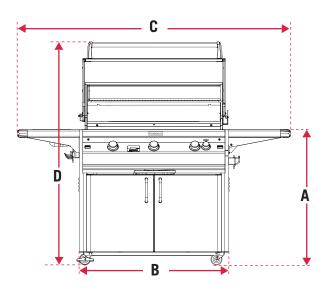

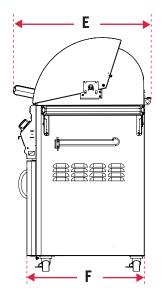


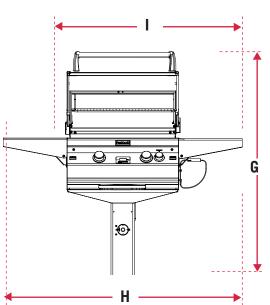

Model #	Series	Top of Face (A)	Cart Base (B)	Shelves Up (C)	Oven Open (D)	Max Outer (E)	Cart Base (F)	Oven Closed (G)	1-Up/1-Down (H)	Shelves Down (I)
A660s	61/62	37"	32 1/ _{2"}	62 ¹ /4"	60 ⁵ /8"	29 3 _{/4"}	26"	52"	52 1/ _{2"}	41 ¹ /2"
A540s	61/62	37"	32 ¹ /2"	62 ¹ /4"	57 ¹ /4"	25 ³ /4"	21 ³ /4"	50"	52 ¹ /2"	41 ¹ /2"
A530s	61/62	37"	26"	55 3/ _{4"}	60 ⁵ /8"	29 3 _{/4"}	26"	52"	46"	35 ¹ /4"
A430s	61/62	37"	26"	55 3/ _{4"}	57 1/ ₄ "	25 ³ /4"	21 ³ /4"	50"	46"	35 1/ _{4"}
A830s	61	37"	50 ³ /4"	80 ³ /4"	57"	28 ³ /4"	21 ³ /4"	50"	70 3 _{/4"}	61 ¹ /4"

VENT HOOD

FIREMAGIC

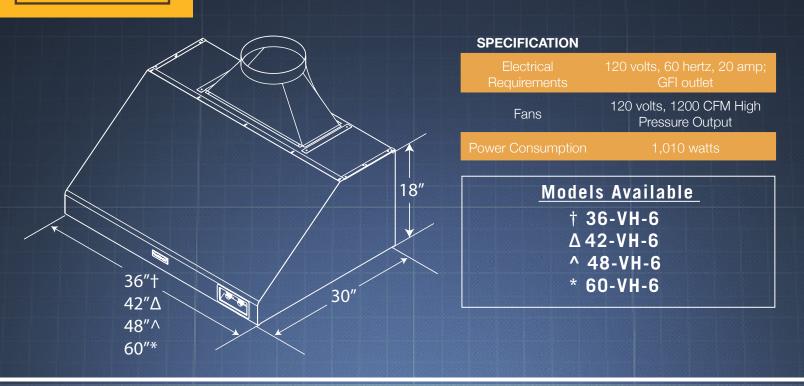

FIRE MAGIC[®] OUTDOOR GAS GRILL WARRANTY

LIFETIME WARRANTY

FIRE MAGIC[®] CAST STAINLESS STEEL BURNERS, STAINLESS STEEL ROD COOKING GRIDS, AND STAINLESS STEEL HOUSINGS ARE WARRANTED FOR AS LONG AS YOU OWN YOUR FIRE MAGIC[®] GRILL.

TWENTY YEAR WARRANTY

CHOICE BURNERS ARE WARRANTED FOR TWENTY (20) YEARS.

FIFTEEN YEAR WARRANTY

FIRE MAGIC[®] BRASS VALVES, MANIFOLD ASSEMBLIES, INNER LINERS, AND BACKBURNER ASSEMBLIES (EXCEPT IGNITION SYSTEMS) ARE WARRANTED FOR FIFTEEN (15) YEARS.

TEN YEAR WARRANTY

FIRE MAGIC[®] ELECTRIC GRILLS, ELECTRIC GRILL STAINLESS STEEL COOKING GRIDS, AND ELECTRIC GRILL STAINLESS STEEL HOUSING ARE WARRANTED FOR TEN (10) YEARS.

FIVE YEAR WARRANTY

INFRARED BURNERS, FLAVORED GRILLS, CHARCOAL STAINLESS STEEL GRILLS, AND SMOKERS (EXCEPT FOR THE CHARCOAL PAN, CHARCOAL GRID, WOOD PELLET SCREEN, THERMOMETER, AND ASH TRAY WHICH ARE WARRANTED FOR ONE YEAR)

ARE WARRANTED FOR FIVE (5) YEARS

THREE YEAR WARRANTY

FIRE MAGIC[®] SIDEBURNERS AND ALL OTHER FIRE MAGIC[®] GRILL COMPONENTS (EXCEPT IGNITION SYSTEMS AND ELECTRICAL PARTS) ARE WARRANTED FOR THREE (3) YEARS.

ONE YEAR WARRANTY

FIRE MAGIC[®] IGNITION SYSTEMS (EXCLUDING BATTERIES), ELECTRICAL COMPONENTS (INCLUDING LIGHTS AND THERMOMETER), AND GRILL ACCESSORIES ARE WARRANTED FOR ONE (1) YEAR.

FireMagic

MAGIC RESERVES THE RIGHT TO AMEND PRODUCT SPECIFICATIONS WITHOUT PRIOR NOTICE. WWW.FIREMAGICGRILLS.COM PHONE 800.332.3973 <u>Rev.1 1405141235</u>

L-C1-013